



EstesRockets.com


LIFETIME LAUNCH PAD

2310


MODEL ROCKET LAUNCH PAD INSTRUCTIONS

KEEP FOR FUTURE REFERENCE

PARTS

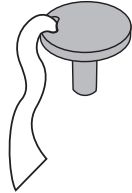


060033
Launch Rod Safety Cap

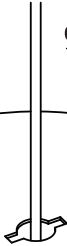


038209
1/8" (3 mm) Launch Rod

038203/204
3/16" (5 mm) Launch Rod

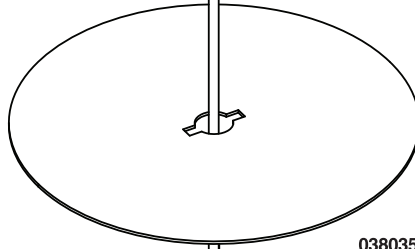


038035
Blast Deflector Plate

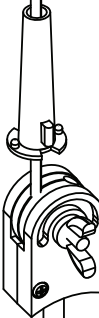


060031
Stand-off Stem




072310
Tiltable Launch Rod Holder

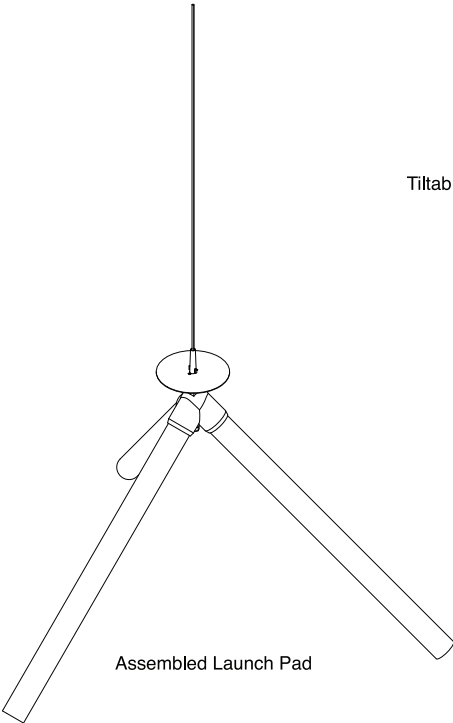

Assembled Launch Pad

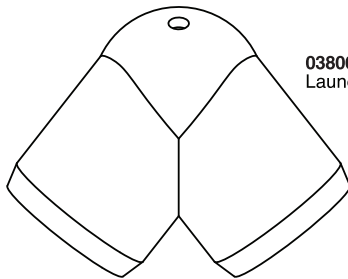


038065
Launch Rod Hub

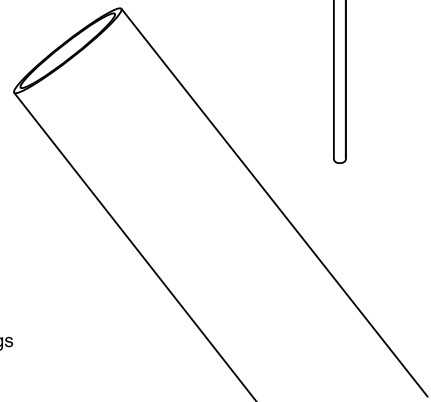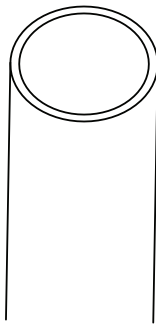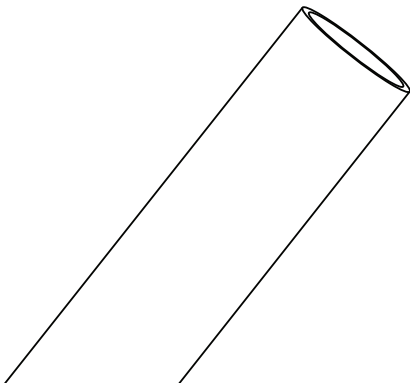


038060
Launch Pad Legs

ASSEMBLE LAUNCH PAD HUB

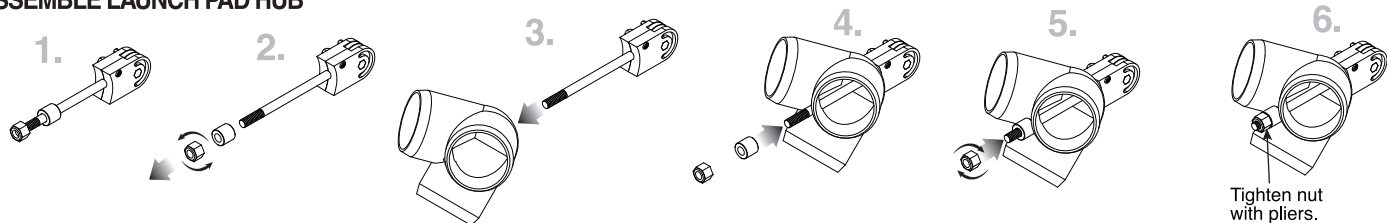

Tighten nut with pliers.

ATTACH LAUNCH PAD LEGS, LAUNCH ROD AND BLAST DEFLECTOR PLATE

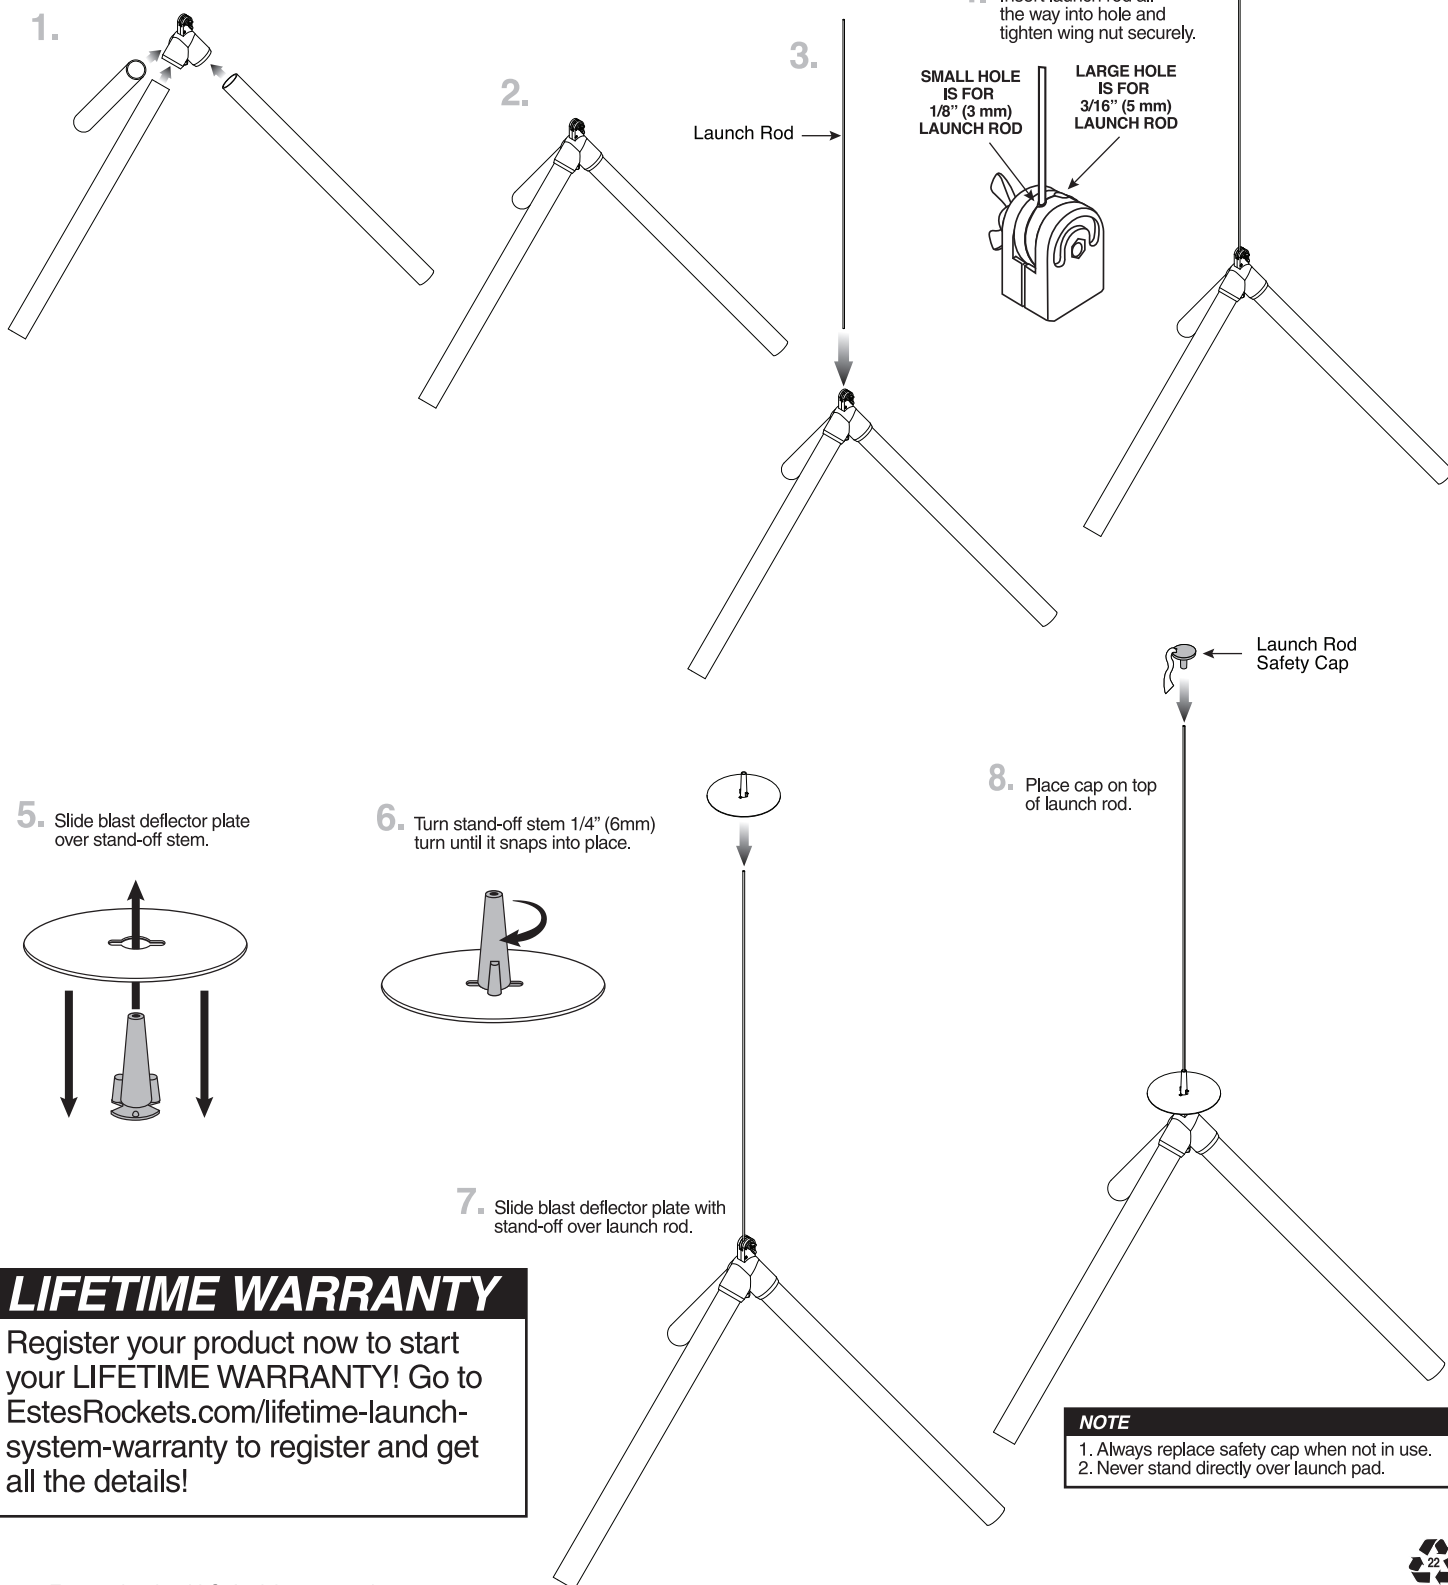

4. Insert launch rod all the way into hole and tighten wing nut securely.

SMALL HOLE IS FOR 1/8" (3 mm) LAUNCH ROD
LARGE HOLE IS FOR 3/16" (5 mm) LAUNCH ROD

Launch Rod

Launch Rod Safety Cap

8. Place cap on top of launch rod.

5. Slide blast deflector plate over stand-off stem.

6. Turn stand-off stem 1/4" (6mm) turn until it snaps into place.

7. Slide blast deflector plate with stand-off over launch rod.

LIFETIME WARRANTY

Register your product now to start your LIFETIME WARRANTY! Go to EstesRockets.com/lifetime-launch-system-warranty to register and get all the details!

NOTE

1. Always replace safety cap when not in use.
2. Never stand directly over launch pad.